

Installation Instructions For Restoration Rosettes and Short Plates

**Fits doors
1-3/8" to 1-3/4" thick**


The Kings Bay

Need help? [Contact us any time. We are here to help.](#)

Passage/Privacy

A

Backset Information

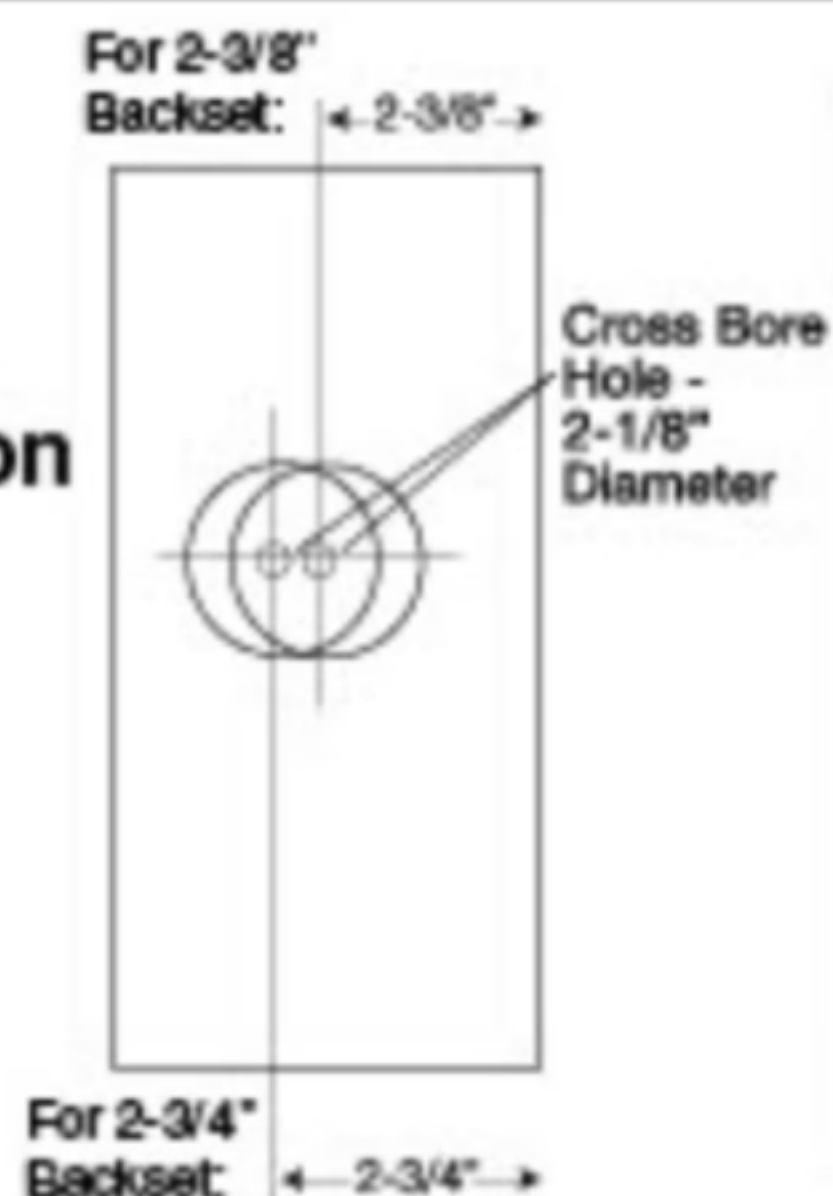

NOTE:
**DRILLING
TEMPLATES ON
SEPARATE
INCLUDED
SHEET**

B

Install Latch



- 1 Install latch and rotate the latch tongue * to change handing. Spin latch tongue
- 2 Install faceplate with 3/4" wood screws.




* See Latch Tongue Note in next panel

*

Latch Tongue Note

Bevel side of latch tongue should contact curved end of face plate, and curved end of strike plate.

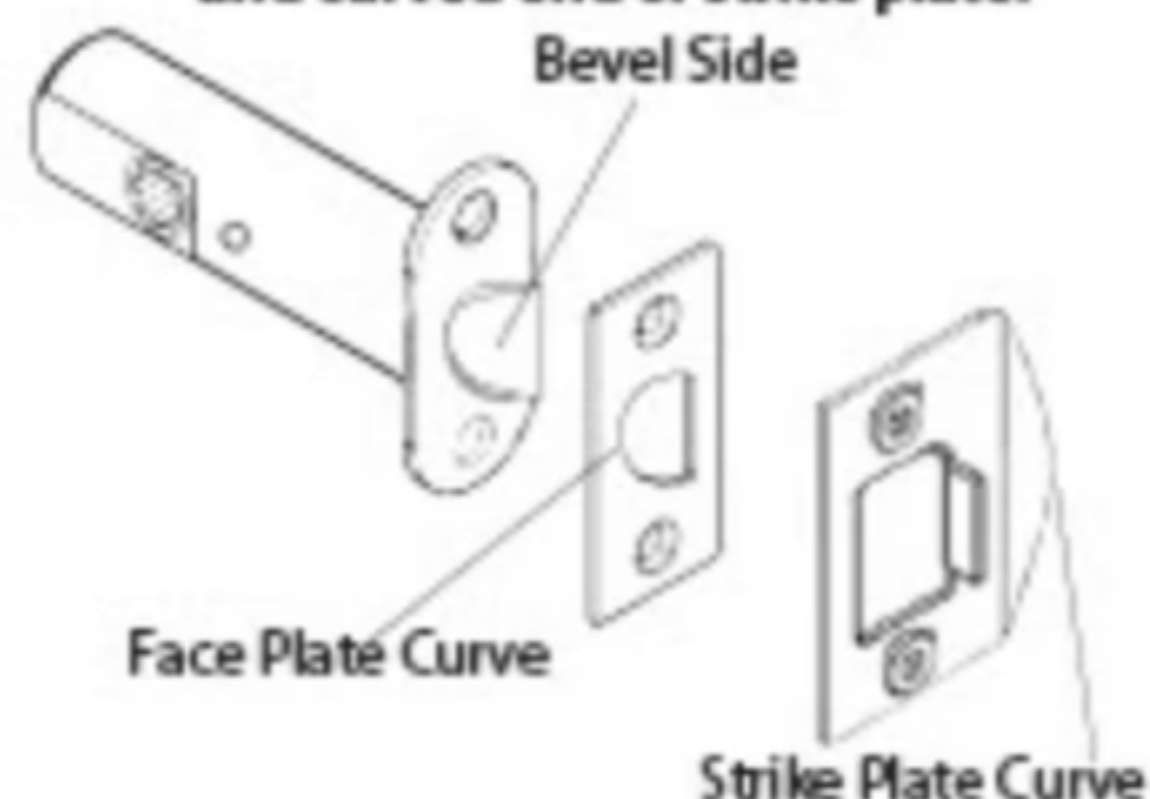

C

Insert Spindle



D

Install Exterior Rosette/Plate




E

Install Bushing & Knob




F

Tighten Hex Screws

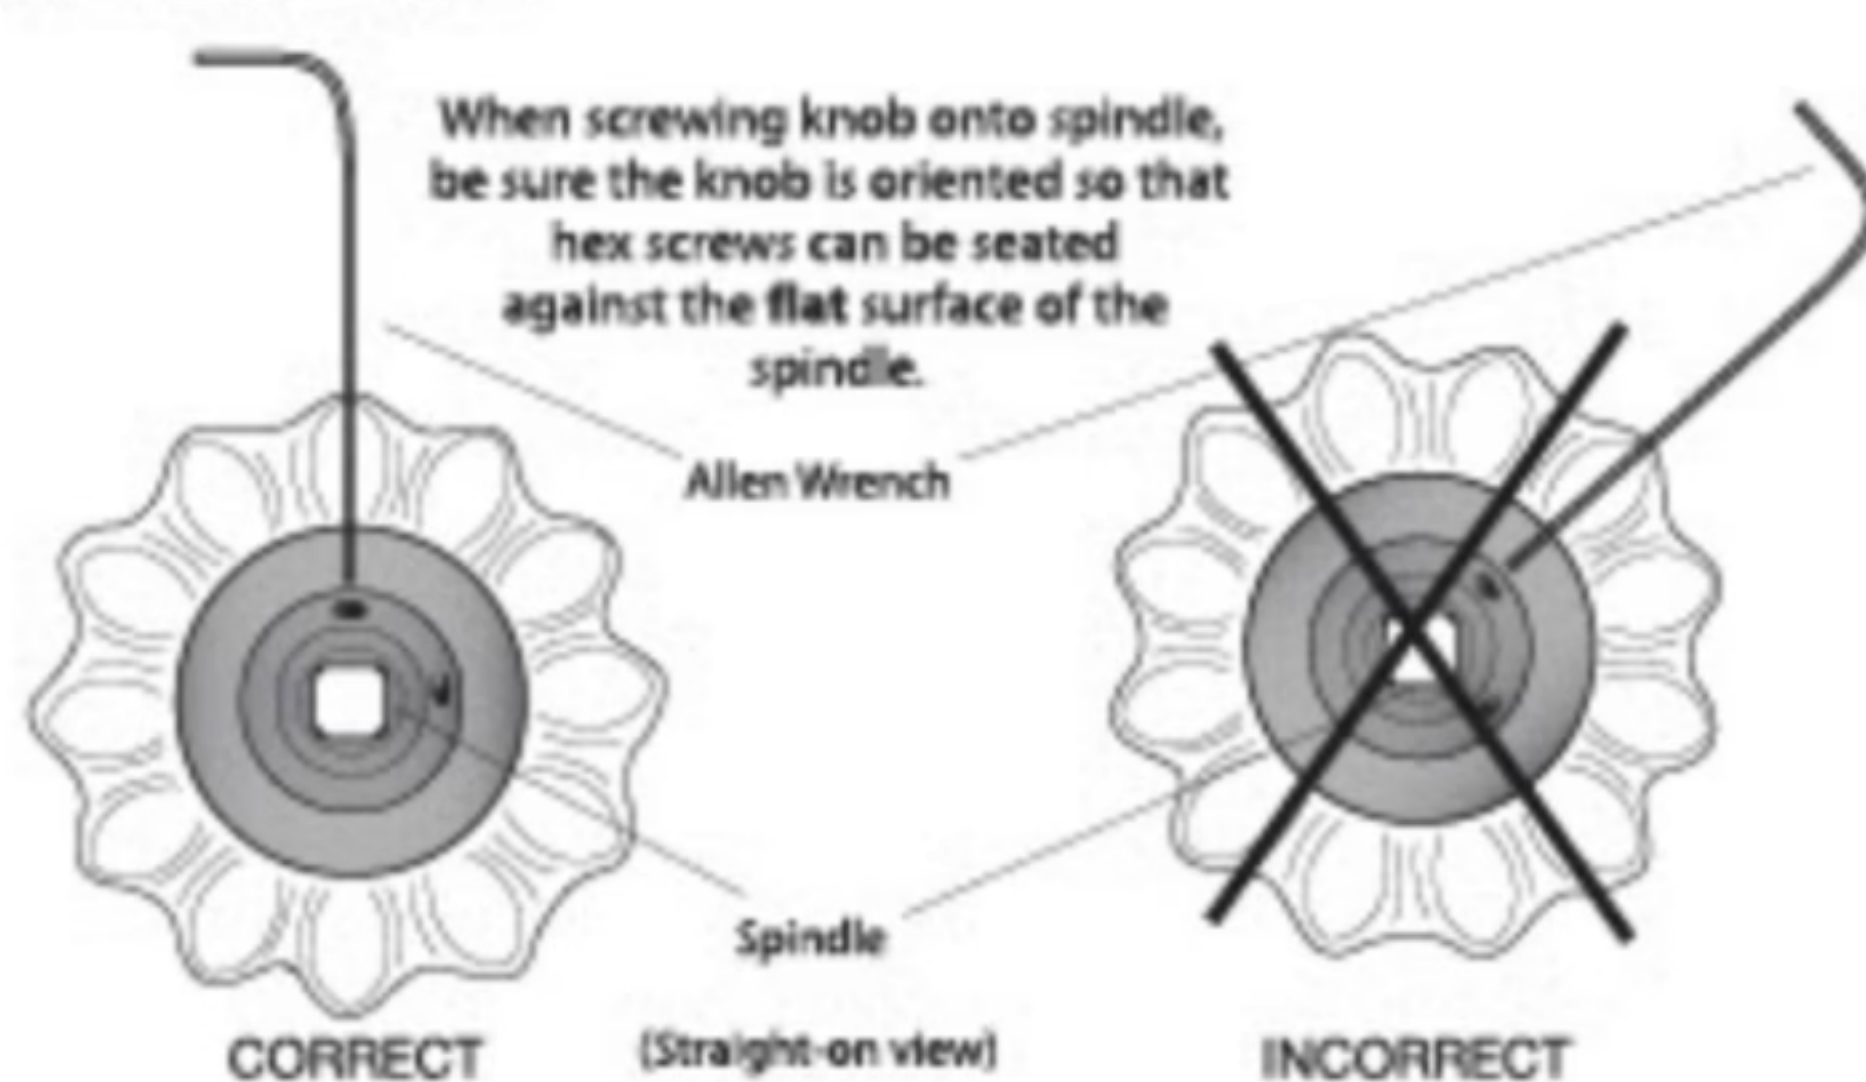


G

Insert both hex screws and tighten

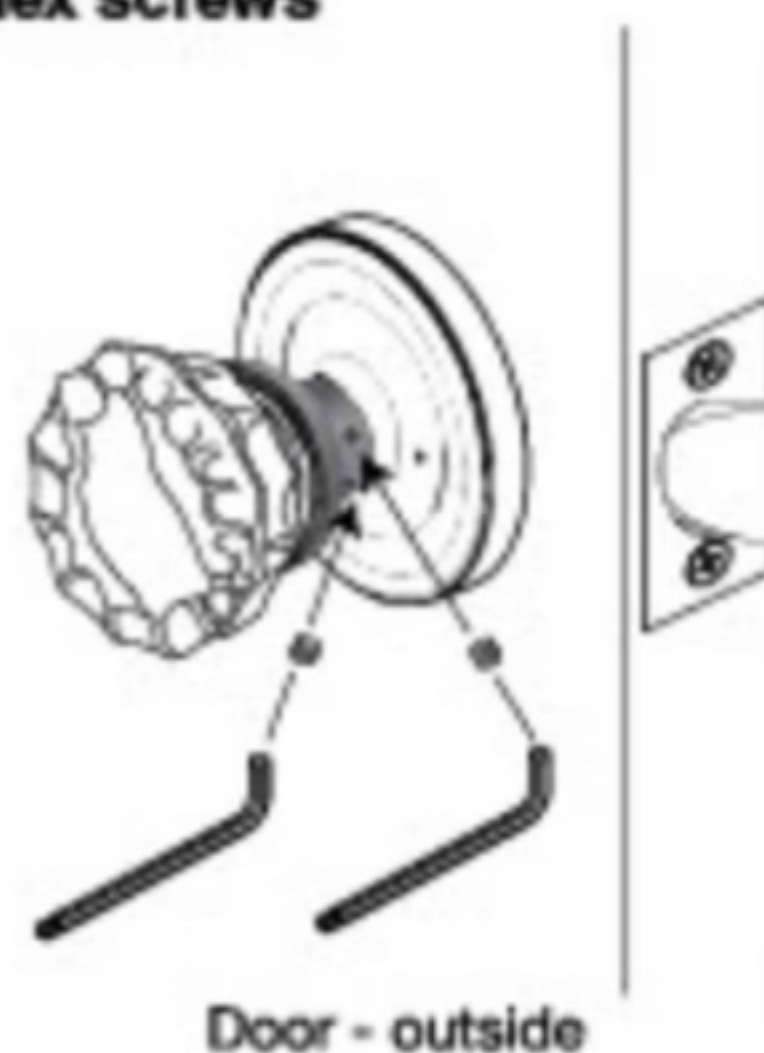


H

Install Interior Rosette/Plate, Bushing and Screws

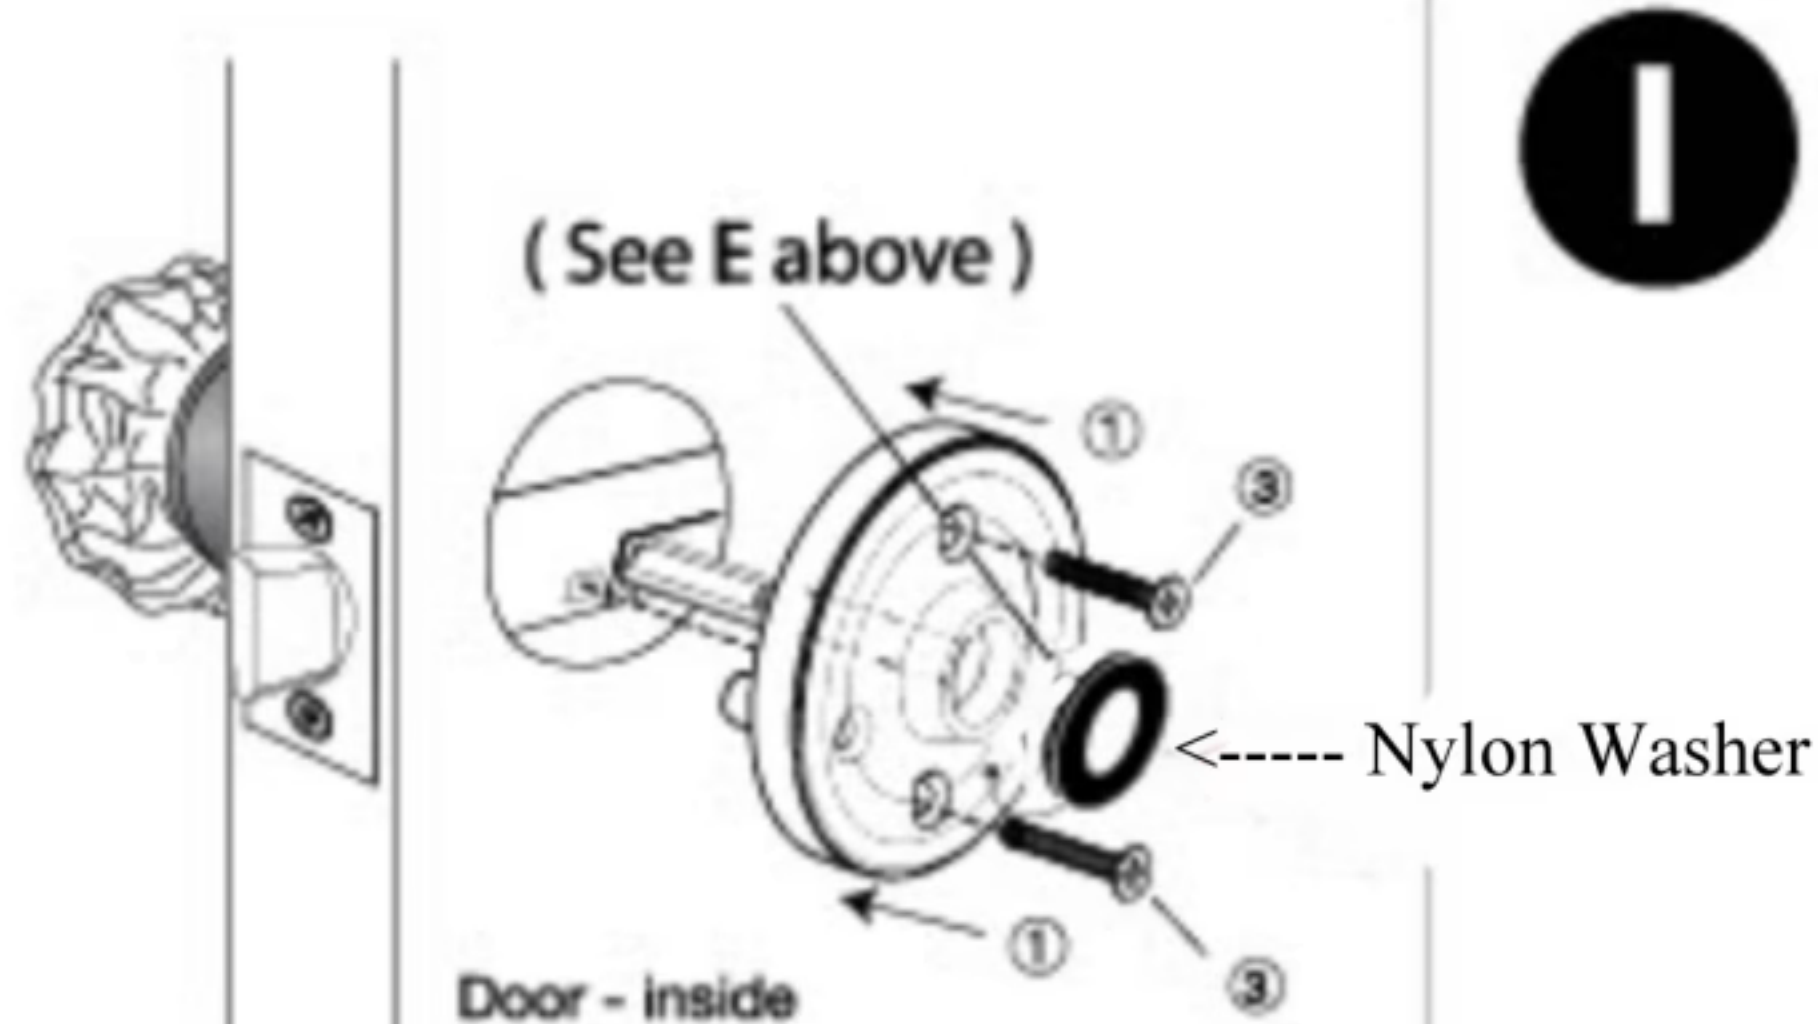


I

Install Knob

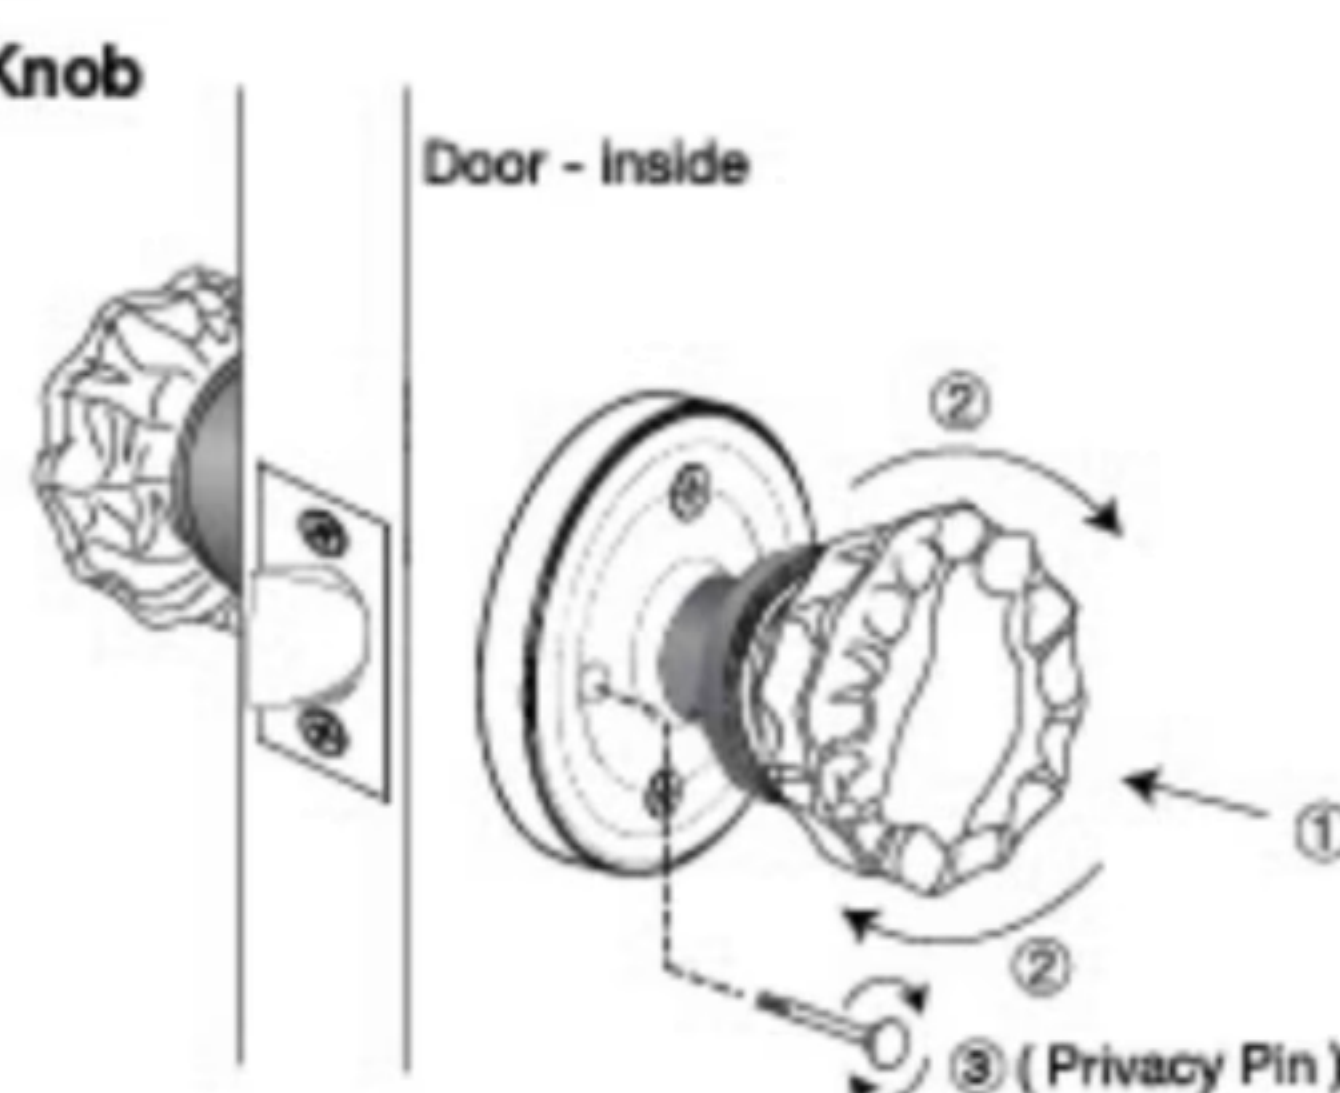

J

Tighten Hex Screws

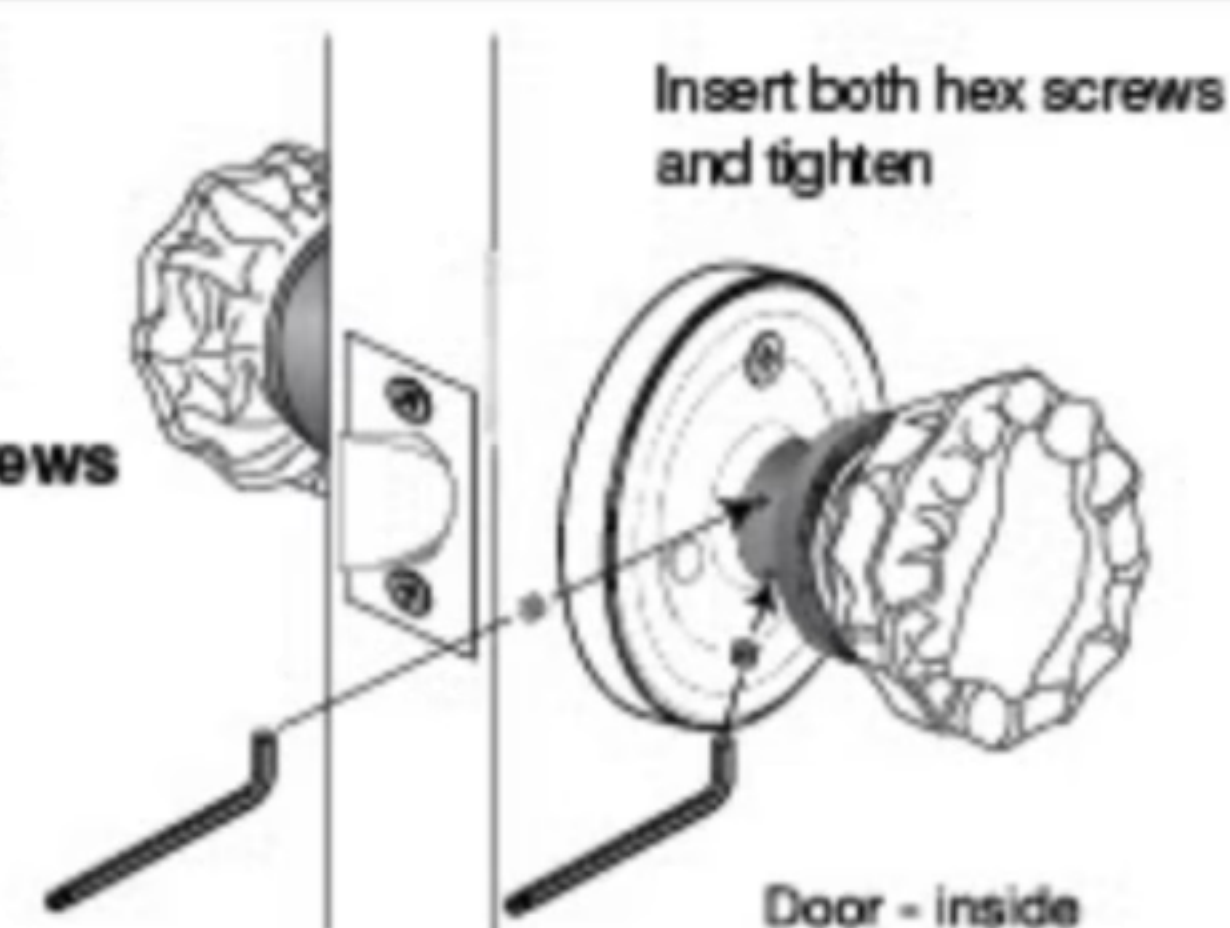

NOTE:
If knobs do not turn freely; loosen one knob and rotate counter clockwise for 1/4 turn, then retighten the hex screws. Repeat if necessary.

Need help?

Please Call us at
800-910-3497
Monday-Friday

Please call or email with ANY questions.
sale@judgehardware.com