


- 1) Insert
nylon bushing
over spindle,
and into
door trim.

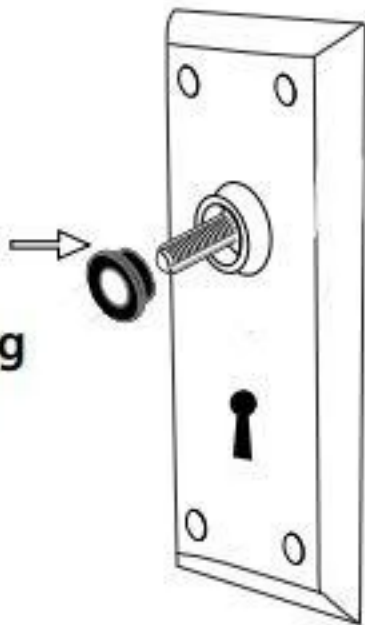

- 2) Make plate parallel with door edge,
and mark the mounting holes.
- 3) Remove the plate, and drill the
mounting holes using $7/64$ " bit.
- 4) Replace the plate and insert the
nylon bushing.
- 5) Mount using $3/4$ " wood screws.
- 6) Repeat for opposite side of door.